

# RGBW Remote Control User Instruction[0157]

Thanks for your purchase !

This manual describes two types of RGBW remote controls used for our RGBW products. Both of them have same functions but different design. Each Remote Control can control the led lights up to four different zones, change the color, dim/brighten the lights, warm/cool white , different programs. In this manual, you will learn

about:


**Pic1:Touch Screen RGBW Remote Control**

**Pic2:RGBW Remote Control with Buttons**

> **Basic functions of the remote control:**

> **Linking new lights to the remote control:**

> **Grouping multiple lights:**

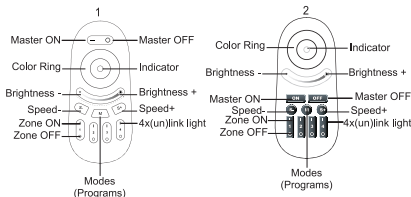

**Basic control functions:**

(As is shown on the right picture )

Long press 'Master ON'/'Zone ON' button, you can get the white mode.

Touch the color ring, you can get any color.

And you can change the brightness by the brightness ring + -.

**Programs:**

**Program 1 ( RGBW Fade In Fade Out)**

This program fades in and fades out the color red, green, blue and white one after another.

**Program2( Color Flash)**

In this program, red, green, blue, white yellow purple flashes to change.

**Program 3 ( Disco)**

Different colors strobe and flash to change.

**Program 4 (Red Color Ramp up and Flash)**

In this program, red color brightens from 0%-100% and shuts down, then flashes three times.

**Program 5 (Green Color Ramp up and Flash)**

In this program, green color brightens from 0%-100% and shuts down, then flashes three times.

**Program 6 (Blue Color Ramp up and Flash)**

In this program, blue color brightens from 0%-100% and shuts down, then flashes three times.

**Program 7( Color Change+ Flash)**

Here several colors fade into each other and then flash randomly.

**Program 8 ( Fade in and Fade out)**

Here different colors fade into each other.

**Program 9 (Strobe White)**

Just white color flashes up.

**TIPS:**

To dim all RGBW lights at once or change the color, first press ' Master ON'. To do this with individual lights, first press'Zone ON'. Secondly, choose the color or brightness according to the color ring or brightness ring.

### ***Linking new lights to the remote controls:***


1. Choose which zone you want to assign the light( 1 to 4)
2. Switch off the main power supply of the light in the selected zone with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds shortly press one of the 'Zone ON' buttons one time on the remote control.
4. When this link operation is successful, the light slowly blinks 3 times on and off.

### ***Unlinking the lights:***

1. Check via the remote control to see which zone ( 1 to 4) is already linked to a light.
2. Switch off the main power supply of the light with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds press 5 times quickly and shortly on one of the 'Zone ON' buttons which you want to link.
4. When this unlink operation is successful, the light quickly blinks 6 times on and off.

### ***Grouping of several lights***

You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

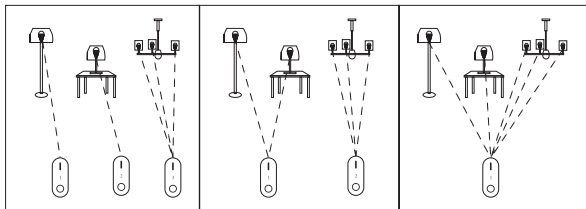

We recommend using rechargeable batteries for the remote controls.

For that reason, we don't include ordinary batteries. We hope you appreciate our environmental friendly choices and they do not cause you any inconvenience.