User Instruction [0101-1]

RF Wireless Touching LED Remote Controller (Brightness Adjusting) Model No.: FUT021

1. Technical Parameters(remote control):

1:Power supply: AAA battery *2 pcs

2:Cover material:ABS

2. Technical Parameters(controller):

- 1. Working voltage: DC12V-24V
- 2. Output control: 2 channels
- 3. Control current: 6A/channel
- 4 Total output: Max. 10A
- 5 Dimension: L85*W45*H22mm
- Receiving range: 30m

Functions of Keys

- 1. Key 1: on
- 2. Key 2: off
- 3. Key 3: highest brightness
- Key 4: medium brightness
- Key 5: lowest brightness

4. How to use

- Use your finger to touch the color ring ,you can change the brightness from the highest to the lowest (100%-1%).
- 2. Resume fuction. The previous settings will be resumed while power on again.
- 3. Link/Unlink

Link: Press 'Key 3' one time within 3 seconds when power on, the link is done when the light blinks 3 times.

Unlink: Press'Key 3' five times quickly within 3 seconds when power on, the unlink is done when the light blinks 6 times.

Caution

Please don't touch or press the color ring while loading the battaries to protect the sensitiveness. Please use the remote controller 3 seconds after the battaries are loaded. Please reload the battaries when you find the color ring is not sensitive.



